User Manual for Refillable Compatible Ink Cartridge
Roland ECO-SOL MAX

Caution: Please use a sharp end to penetrate the sealing film before installing cartridge onto the printer.

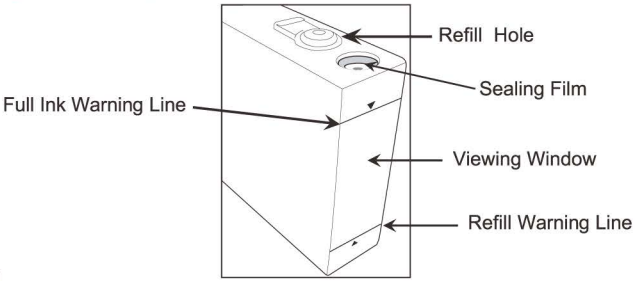

I. INSTALLATION

1. Remove the used/empty cartridge from printer according to the printer user manual.
2. Please use a sharp end to penetrate the sealing film before installing cartridge.
3. Install the new cartridge onto the printer. The cartridge status will be read from the printer panel.
4. When the width of printing substrate is displayed on the printer panel, you can conduct the normal printing.

NOTE

Please read it carefully before any action!

Ink consumption can not be detected and can not be read from printer panel during printing process. There won't be an auto print suspension before ink out. Please check regularly on the ink consumption of cartridge from the transparent Viewing Window. Once the ink level goes below the Refill Warning Line, please replace or refill the cartridge in time.

By working with an 'auto alert kit', you will be reminded when ink out (Not enclosed. Please contact our sales representatives for further details).

II. REFILLING

1. Unplug the rubber plug from the Refill Hole, then, use a refill kit (e.g. funnel, large-sized syringe, etc) to fill the ink into the cartridge (Fig.1). Please unplug the rubber plug gently when refilling the ink, or else the ink on the plug will spill out and pollute the surroundings.
2. While refilling ink into the cartridge, please pay attention to ink level displayed on the Viewing Window of the cartridge. Please stop filling when the ink level reaches the Full Ink Warning Line.
3. Use tissues to wipe off the residual ink around Refill Hole, and reset the rubber plug.
4. You are ready for printing again!

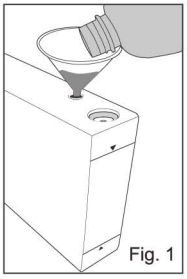

Fig. 1

All brand names and trade marks are the properties of their respective holders and are referred to here for descriptive purposes only. We are not associated with any printer and/or original printing supplies manufacturers.